

*Packaged RTU Builder v1.14 replaces v1.13.*

## UPDATE DESCRIPTION

Packaged RTU Builder v1.14 makes the following changes:

- Added the 14 SEER unit models 48/50VL, 48/50VT.
- Added guide specification and features sheets for 48/50PM.
- Added 1.5 ton size model for the 48/50SD.
- Added a new Verify Part Number feature. This feature allows you to enter a part number. The program will then determine whether it is valid. If valid, you can choose to generate a rooftop tag whose configuration matches the part number.
- Obsoleted the following small package unit models: 48/50GX, 50JX, 50GL, 48GP, 48/50JZ, 48/50CE, 50CR
- Obsoleted 3 to 5 tons unit model sizes for 48/50TM, 48TF, 50TFF, 50 TFQ
- Obsoleted 50AH.

Version 1.14 also corrects the following problems:

- For PG and HJ selections, specification of a non-powered convenience outlet affected the electrical data (MCA and MOCP). Instead, only a powered convenience outlet should affect the MCA and MOCP electrical data.
- For 48/50TC selections, the coil guard accessory option contained the wrong list of available accessories.
- For 7.5 to 10 ton 50TC units, the sensor option "RA and SA smoke detector" was listed twice.
- Electrical data for 50TM007, 575 volts, standard IFM was missing from the database.

## INSTALLATION PROCEDURES

### Installation via Internet Download

- Download the **ecat-prb114.exe** file from the Internet site and save it in a folder on your hard disk.
- Run Windows Explorer and double-click on the **ecat-prb114.exe** file. This launches the program installer.
- Follow the installation instructions which appear on your screen.
- Note: AutoDesk VoloView Express® and the latest X Builder Framework should be installed prior to installing the Packaged RTU Builder. Both can be downloaded from the internet site.

### Running the Program:

- From the Windows desktop press Start, choose Programs and then choose Carrier E-CAT/E20-II programs.
- In the Carrier E-CAT/E20-II Programs group click on the Packaged RTU Builder v1.14 item.

### Minimum Computer Requirements:

- Hard Disk Space: 40 megabytes
- Random Access Memory: At least 256 megabytes
- Display Monitor: At least VGA with 600x800 resolution and 256 colors.
- Operating System: Windows 98, 2000, XP, Vista or Windows NT (with service pack 4 or later).
- The latest X Builder Framework should be installed prior to installing the Packaged RTU Builder.
- AutoDesk VoloView Express®

AutoDesk VoloView Express® and the latest X Builder Framework should be installed before running this program. Both can be downloaded from the internet site. VoloView Express® (copyright Autodesk, Inc.) is freely distributed by AutoDesk Inc., as its drawing viewer. Any redistribution of VoloView Express® must be in compliance with the Software License Agreement which is displayed during the VoloView Express® installation.

**Carrier Electronic Catalog  
Packaged RTU Builder v1.14  
Release Sheet**

**PREVIOUS VERSION INFORMATION**

1. Packaged RTU Builder v1.14 will replace v1.13 automatically. It is not necessary to uninstall v1.13 before installing v1.14.
2. Data created with Packaged RTU Builder v1.13 can be used in v1.14. No data conversion procedures are required.

**SPECIAL NOTES**

1. **XBuilder** The latest version of X Builder Framework should be installed before installing Packaged RTU Builder.
2. **AutoDesk VoloView Express®** must be installed in order to view DXF template drawings in the program.