

Packaged RTU Builder v1.18 replaces v1.16.

UPDATE DESCRIPTION

Packaged RTU Builder v1.18 makes the following changes:

- Added the new 48/50PD (4 and 5 tons) Puron based units.
- Added new DXF templates for the PG's with EnergyX.
- Added EnergyX to the 48/50PM units.

In addition, the following problems were corrected:

- For 48/50PG selections, when the HACR breaker factory installed option was specified the program neglected to check whether the unit MOCB exceeded the maximum rated value for the HACR breaker.
- 48/50PM fan data for horizontal applications was incorrectly using data for vertical applications.
- 48/50PM electrical data for the indoor fan motor type was incorrect.
- The HumidiMizer button on the Design Criteria tab was not enabled when HumidiMizer was selected for the 48/50PM.
- For 208-3-60 50HJQ005 units one of the electric heater sizes offered was incorrect.
- 48TM014 units incorrectly offered High Heat and Low NOx options.

INSTALLATION PROCEDURES

Installation via Internet Download

- Download the **ecat-prb118.exe** file from the Internet site and save it in a folder on your hard disk.
- Run Windows Explorer and double-click on the **ecat-prb118.exe** file. This launches the program installer.
- Follow the installation instructions which appear on your screen.
- Note: AutoDesk VoloView Express® and the latest X Builder Framework should be installed prior to installing the Packaged RTU Builder. Both can be downloaded from the internet site.

Running the Program:

- From the Windows desktop press Start, choose Programs and then choose Carrier E-CAT/E20-II programs.
- In the Carrier E-CAT/E20-II Programs group click on the Packaged RTU Builder v1.18 item.

Minimum Computer Requirements:

- Hard Disk Space: 40 megabytes
- Random Access Memory: At least 256 megabytes
- Display Monitor: At least VGA with 600x800 resolution and 256 colors.
- Operating System: Windows 98, 2000, XP, Vista or Windows NT (with service pack 4 or later).
- The latest X Builder Framework should be installed prior to installing the Packaged RTU Builder.
- AutoDesk VoloView Express®

AutoDesk VoloView Express® and the latest X Builder Framework should be installed before running this program. Both can be downloaded from the internet site. VoloView Express® (copyright Autodesk, Inc.) is freely distributed by AutoDesk Inc., as its drawing viewer. Any redistribution of VoloView Express® must be in compliance with the Software License Agreement which is displayed during the VoloView Express® installation.

**Carrier Electronic Catalog
Packaged RTU Builder v1.18
Release Sheet**

PREVIOUS VERSION INFORMATION

1. Packaged RTU Builder v1.18 will replace v1.16 automatically. It is not necessary to uninstall v1.16 before installing v1.18.
2. Data created with Packaged RTU Builder v1.16 can be used in v1.18. No data conversion procedures are required.
3. Packaged RTU Builder v1.17 was released only to Carrier sales offices.

SPECIAL NOTES

1. **XBuilder** The latest version of X Builder Framework should be installed before installing Packaged RTU Builder.
2. **AutoDesk VoloView Express®** must be installed in order to view DXF template drawings in the program.