

Applied RTU Builder v1.59y replaces v1.59x.

UPDATE DESCRIPTION

Applied RTU Builder v1.59y includes the following change:

- Removed "A" Series (R-22) sizes 036, 041 and 051.

In addition, the following problems were corrected:

- The quantity for control accessories was not updated properly when the base unit quantity was modified.
- The gas heating section of the performance data report was not properly generated for units in which the staged gas heating option was selected. The report was missing pertinent information about the staged gas heating performance.
- Motor weights for R-22 and Puron "A" Series units were incorrect. In addition, the weight for manual VFD bypass was not included in calculations.

INSTALLATION PROCEDURES

Installation via Internet Download

- Download the **ecat-rtu159y.exe** file from the Internet site and save it in a folder on your hard disk.
- Run Windows Explorer and double-click on the **ecat-rtu159y.exe** file. This launches the program installer.
- Follow the installation instructions that appear on your screen.
- Note that the current version of X Builder Framework and AutoDesk Volo View Express® should be installed for Applied RTU Builder to function correctly. Both can be downloaded from the internet site.

Running the Program

Use the following procedure to run the program:

- From the Windows desktop press Start, choose Programs and then choose Carrier E-CAT/E20-II programs.
- In the Carrier E-CAT/E20-II Programs group click on the Applied RTU Builder v1.59y item

Minimum Computer Requirements:

- Hard Disk Space: Up to 50 megabytes
- Random Access Memory: At least 64 megabytes
- Display Monitor: At least VGA with 600x800 resolution and 256 colors.
- Operating System: Windows 98, 2000, XP, Vista or Windows NT (with service pack 4 or later).
- X-Builder Framework (current version) and Autodesk Volo View Express®

Note: X Builder Framework and Autodesk Volo View Express® programs should be installed before installing or running this program. Both can be downloaded from the internet site. Volo View Express® (copyright Autodesk, Inc.) is freely distributed by Autodesk, Inc. as its drawing viewer. Any redistribution of Volo View Express® must be in compliance with the Software License Agreement that is displayed during the Volo View Express® installation.

PREVIOUS VERSION INFORMATION

- When Applied RTU Builder v1.59y is installed it will overwrite v1.59x automatically. It is not necessary to uninstall v1.59x before installing v1.59y.
- Data created with Applied RTU Builder v1.59x can be used in v1.59y. No data conversion procedures are required.

SPECIAL NOTES

1. **XBuilder.** The latest version of X Builder Framework should be installed before installing Packaged RTU Builder.
2. **AutoDesk VoloView Express®** must be installed in order to view DXF template drawings in the program.