



Installation Instructions

Part No: 38AP-900---001; 38AP-900---002; 38AP-900---003

SAFETY CONSIDERATIONS

When installing this accessory, observe precautions in the literature and on any labels attached to the equipment, and all other safety precautions that may apply.

- Follow all safety codes.
- Wear safety glasses and work gloves.
- Use care in handling and installing this accessory.

WARNING

Electrical shock can cause personal injury and death. Shut off all power to this equipment during installation. There may be more than one disconnect switch. Tag all disconnect locations to alert others not to restore power until work is completed.

INTRODUCTION

This accessory package is intended for use with 30RAP010-060, 38APD025-060, and 38APS025-050 units. See Table 1 for accessory package usage. The security grille/hail guard accessory helps prevent condenser coil damage. Refer to Table 2 for accessory package contents.

Table 1 — Accessory Package Usage

UNIT SIZE		ACCESSORY PART NO.	QTY USED
30RAP	38AP		
010,015	—	38AP-900---001	1
018,020	025	38AP-900---002	1
025,030	027,030	38AP-900---003	1
035,040	—	38AP-900---002	2
045-060	040-060	38AP-900---003	2

Table 2 — Accessory Package Contents

ACCESSORY PART NO.	ITEM NO.	(QTY) PART NO.	PART DESCRIPTION
38AP-900---001	1	(2) 38AP403039	Louvered Panel
	2	(1) 38AP503018	Center Channel
	3	(20) AL56ZA003	1/4-14 x 5/8-in. long Screws
38AP-900---002	1	(2) 38AP403038	Louvered Panel
	2	(1) 38AP503019	Center Channel
	3	(20) AL56ZA003	1/4-14 x 5/8-in. long Screws
38AP-900---003	1	(2) 38AP403037	Louvered Panel
	2	(1) 38AP503020	Center Channel
	3	(20) AL56ZA003	1/4-14 x 5/8-in. long Screws

INSTALLATION

Refer to Tables 1 and 2 and inspect package contents for any missing or damaged parts. File a claim with the shipping company if any item is missing or damaged, and notify your Carrier representative (see Fig 1).

1. Disconnect all power to the unit.

NOTE: Two accessory packages are required for unit sizes 035-060. Refer to Table 1.

2. Install the center bracket (Item 2) using 2 screws provided (Item 3).
3. Attach two louvered panels (Item 1) to the bracket and corner posts with 8 screws provided (Item 3).
4. For sizes 035-060, repeat Steps 2 and 3 to install the opposite side louvered panels.
5. Restore power to the unit.

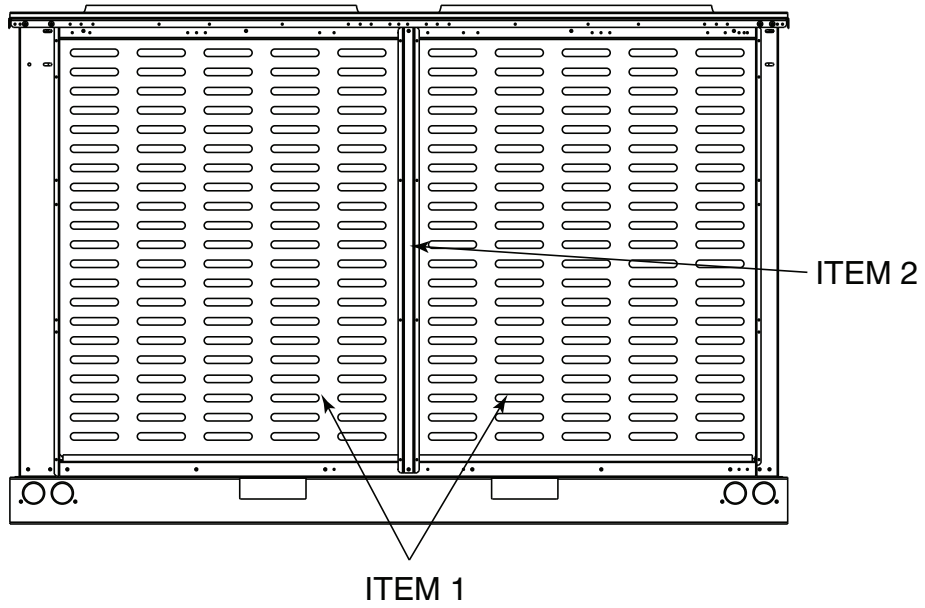


Fig. 1 — Security Grille/Hail Guard Installation (38AP025-030 and 30RAP018-030 Shown)