

## Installation Instructions

Part No. 30RA-900---005

### SAFETY CONSIDERATIONS

Installing, starting up, and servicing air-conditioning equipment can be hazardous due to system pressures, electrical components, and equipment location.

Only trained, qualified installers and service mechanics should install, start up, and service this equipment. When working on the equipment, observe precautions in the literature and on tags, stickers, and labels attached to the equipment. Follow all safety codes. Wear safety glasses and work gloves.

### GENERAL

The vibration isolation accessory kit consists of 4 each 24-in. x 3-in.  $\frac{1}{4}$ -in. resilient neoprene pads (Fig. 1) for use with the 30RA010-055 units. The pads are oil-resistant and have a cross-ribbed design with ribs of alternating heights. One pad should be mounted under each of the four corners of the unit.

### PREINSTALLATION

Remove accessory from packaging and inspect shipment for damage. File claim with shipping company if accessory is damaged or incomplete.

### INSTALLATION

Install the accessory kit as follows:

1. The accessory kit is usually installed at the initial unit installation. If the kit is to be installed after the unit is already in place, disconnect all power and chilled fluid piping to the unit first.

#### **⚠ WARNING**

To avoid possible electrical shock and personal injury, all power to unit must be disconnected before working on unit. Tag all disconnects to alert others unit is being worked on.

2. Rig unit per base unit installation instructions and raise unit above its final installation location (see Fig. 2).
3. Insert one pad under each corner of the unit in line with the unit condenser coils. See Fig. 3.
4. Lower unit in place. Note that unit must be leveled according to base unit installation instructions.
5. Restore unit power and fluid connections or continue with initial unit installation.

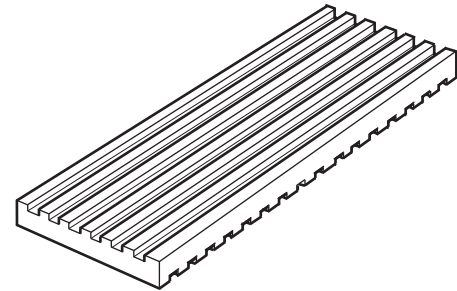 


Fig. 1 — Vibration Isolation Pad



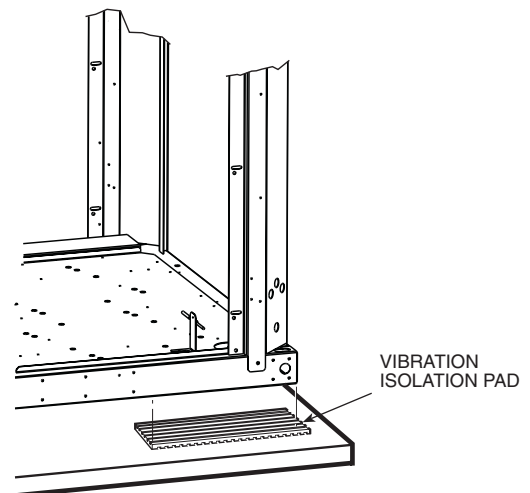 



Fig. 2 — Typical Installation

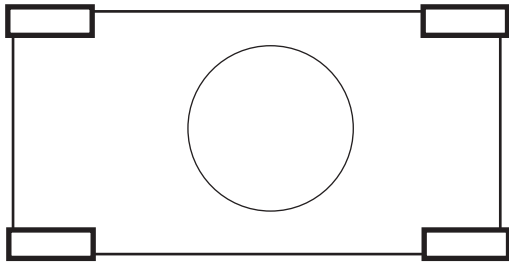 

SIZES 010-018

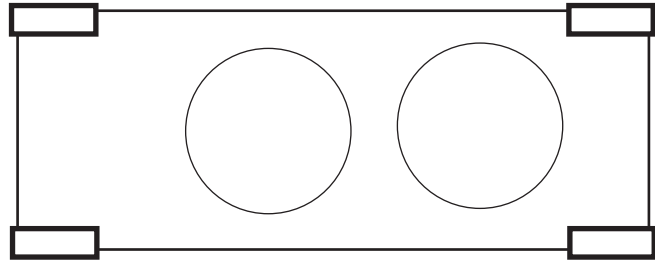 

SIZES 022-030

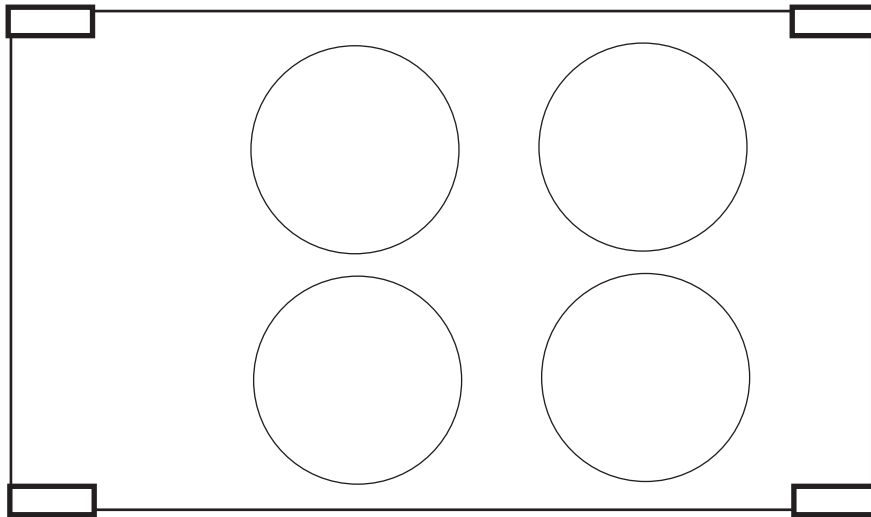 

SIZES 032-055

**Fig. 3 — Vibration Isolation Pad Locations**