

# Accessory Baffle Kit For Use With Packaged Terminal Air Conditioner or Heat Pump

Cancels: New

IIK 84-07-8  
9/15/03

## Installation Instructions

### INTRODUCTION

These instructions cover the installation of the Accessory Baffle Kit. The Accessory Baffle Kit is required for applications where a factory wall sleeve is used without a factory exterior grille. The Accessory Baffle Kit ensures a good seal between the unit and the exterior grille to prevent air recirculation, which can cause system failure. See Fig. 1.

### PACKAGE CONTENTS

ITEM	QUANTITY
Baffle	2

### INSTALLATION

#### ⚠ WARNING

Disconnect all power to unit to avoid possible electrical shock during installation.

**Step 1** — Be sure to disconnect all power to unit.

**Step 2** — Remove unit from wall sleeve.


**Step 3** — Remove outdoor coil tube sheet screws from basepan and hook the top of baffle to each tube sheet on the coil. Tube sheet is the flat metal piece on each end of the coil (see Fig. 2 and 3).

**Step 4** — Reinstall screws securing the baffle and the coil to the basepan.


**Step 5** — Installation is complete (see Fig. 4).

**Step 6** — To install unit into sleeve, refer to instructions supplied with unit for proper unit installation and operation.


**Step 7** — Restore power to unit.

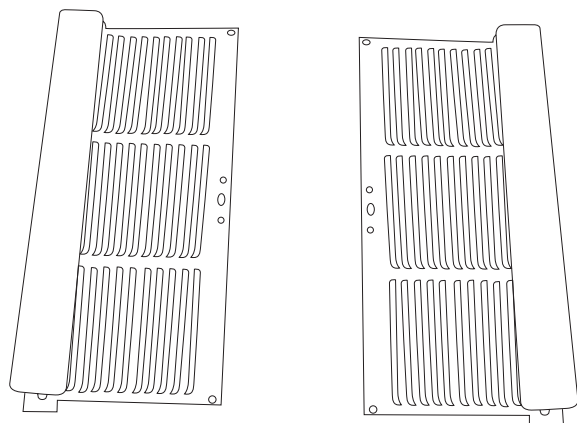


**Fig. 1 — Accessory Baffle Kit**

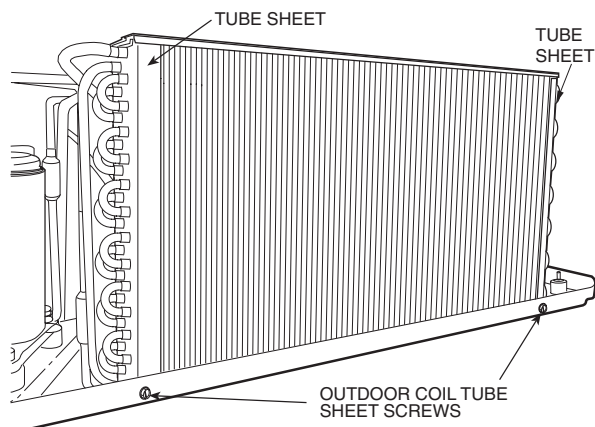

**Fig. 2 — Remove Outdoor Coil Tube Sheet Screws**

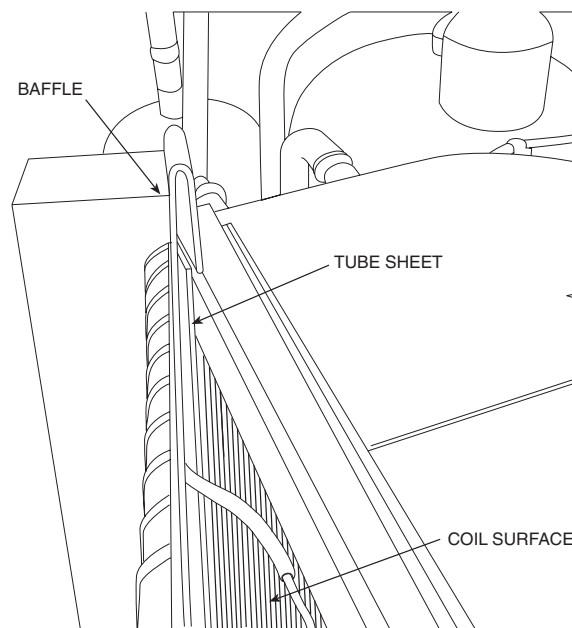

**Fig. 3 — Attach Baffle to Tube Sheet**

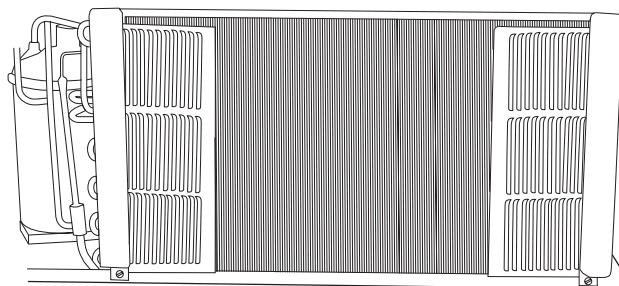

**Fig. 4 — Installation Complete**

Copyright 2003 CAC/BDP

Manufacturer reserves the right to discontinue, or change at any time, specifications or designs without notice and without incurring obligations.

Book 1 | 4  
Tab 9a | 11a

PC 132

Catalog No. 535-20059

Printed in U.S.A.

Form 52C,P-31SI

Pg 1

9-03

Replaces: New