


All New WeatherMaker 8000 Dimensional Information

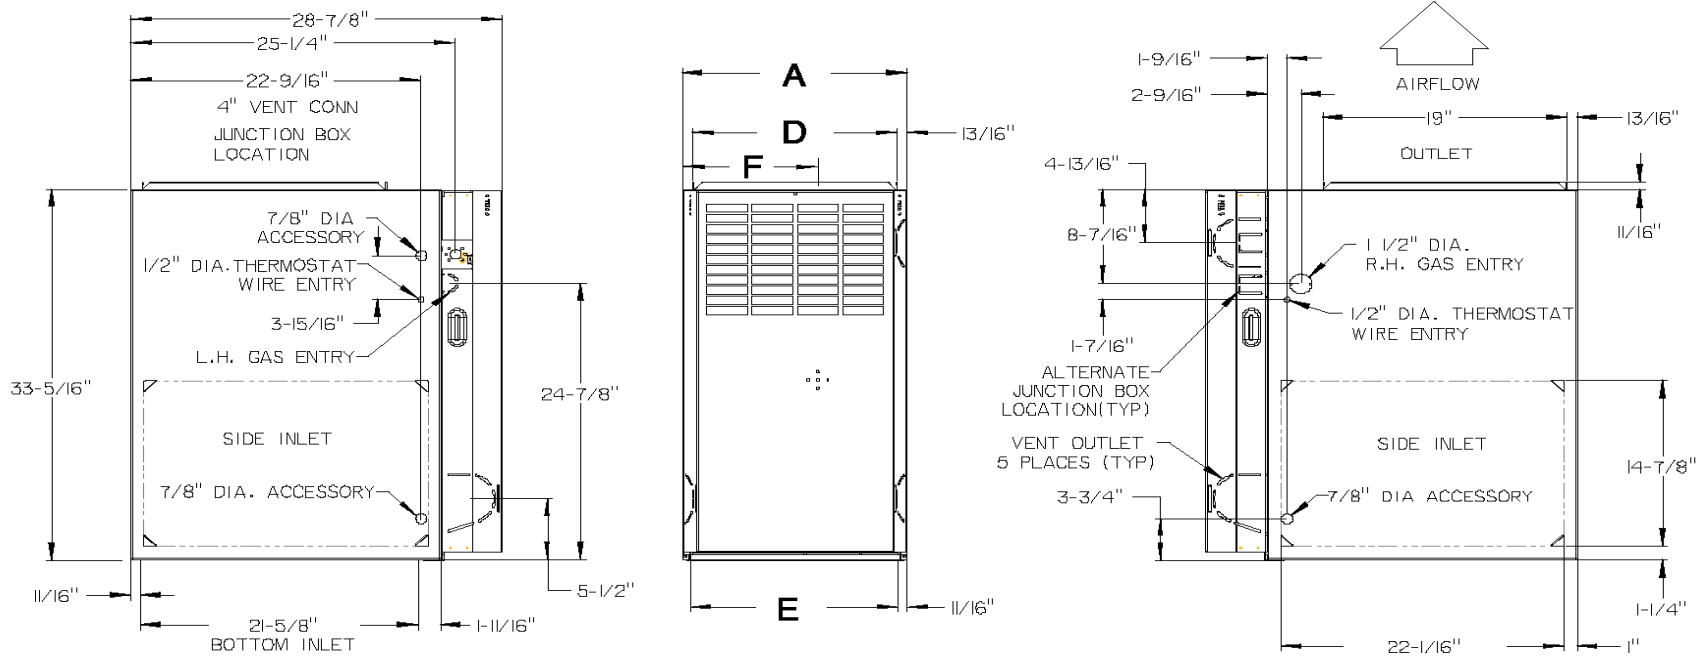

A02021

58ST/DL/CT UNIT SIZE	58CV UNIT SIZE	A (CABINET WIDTH)	D (SUPPLY WIDTH)	E (BOTTOM RETURN WIDTH)	F (TOP VENT OUTLET)	VENT CONNECTION SIZE (see note 1)
045-08		14-3/16	12-9/16	12-11/16	9-5/16	4
045-12		14-3/16	12-9/16	12-11/16	9-5/16	4
070-08	070-12	14-3/16	12-9/16	12-11/16	9-5/16	4
070-12		14-3/16	12-9/16	12-11/16	9-5/16	4
070-16		17-1/2	15-7/8	16-1/8	11-9/16	4
090-14	090-16	17-1/2	15-7/8	16-1/8	11-9/16	4
090-16		21	19-3/8	19-1/2	13-5/16	4
090-20		21	19-3/8	19-1/2	13-5/16	4
110-12		17-1/2	15-7/8	16-1/8	11-9/16	4
110-16	100-22	21	19-3/8	19-1/2	13-5/16	4
110-22		21	19-3/8	19-1/2	13-5/16	4
135-16		21	19-3/8	19-1/2	13-5/16	4 (note 1)
135-22	135-22	24-1/2	22-7/8	23	15-1/16	4 (note 1)
155-20	155-22	24-1/2	22-7/8	23	15-1/16	4 (note 1)

Notes:

1) 135 and 155 size furnaces require five-inch vents. Use a 4-5 inch vent adapter between furnace and vent stack.

2) See Installation Instructions for complete installation requirements.