

Installation Instructions

IMPORTANT: Read these instructions completely before attempting to install the accessory hail guard.

PACKAGE USAGE


UNIT 48/50PD 48/50PG	PART NUMBER
03-07	CRHAILGD015A00
08-14	CRHAILGD016A00

SAFETY CONSIDERATIONS

Installation and servicing of air-conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair, or service air-conditioning equipment.

When working on equipment, observe precautions in the literature, tags and labels attached to the unit, and other safety precautions that may apply.

Follow all safety codes. Wear safety glasses and work gloves.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies a hazard which **could** result in personal injury or death. CAUTION is used to identify unsafe practices which **may** result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

GENERAL

The accessory hail guard is designed to protect the condenser coil from hail, flying debris, and damage by large objects without increasing unit clearances.

INSTALLATION

WARNING

ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury and/or death.

Turn off unit power and lock out.

To install the hail guard, perform the following:

1. Make sure power supply is turned off and lock out tag is installed.
2. Remove the screws from around the perimeter of the condenser coil. Save screws. (See Fig. 1.)
3. Slide the top flange of the hail guard underneath the top flange of the unit.
4. With the hail guard in place, re-install the screws removed from Step 2 to secure the hail guard to the unit. (See Fig. 1.)

CAUTION

EQUIPMENT DAMAGE HAZARD

Failure to follow this caution may result in damage to equipment.

To avoid damage to the condenser coil, only install screws in to the existing holes.

5. Remove lockout tag and restore power to unit.

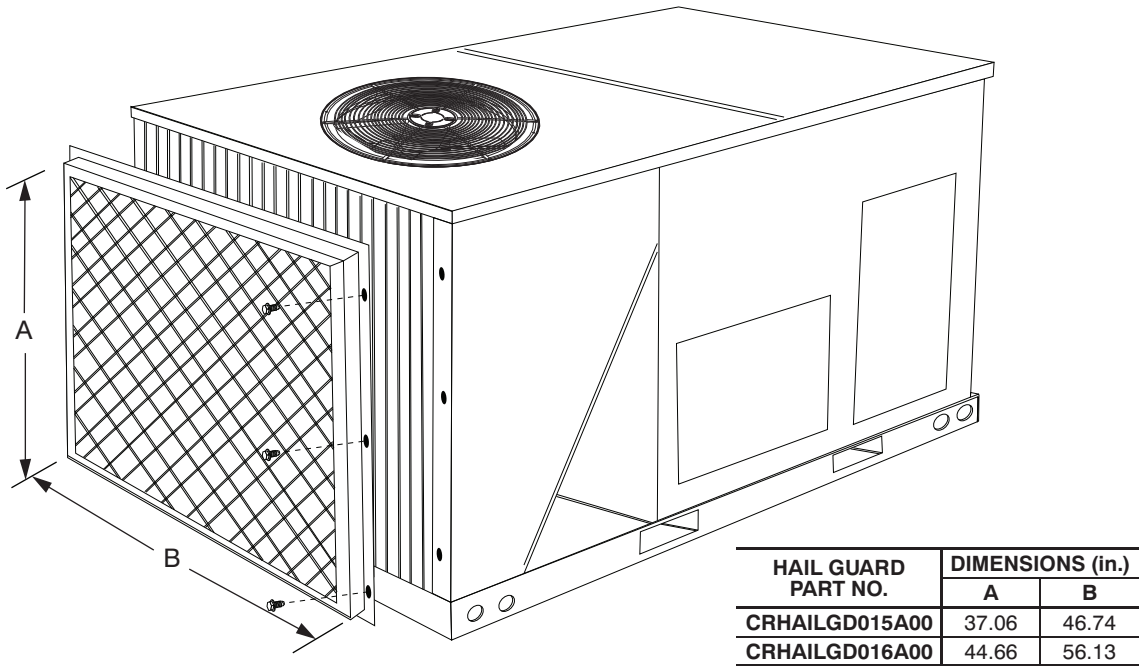


Fig. 1 - Hail Guard Installation

C09104