

# Polymeric Architectural Grille Accessory For Use With Packaged Terminal Air Conditioner or Heat Pump

Cancels: IIK 830-06-3

IIK 830-06-6  
8/15/02

## Installation Instructions

### INTRODUCTION

These instructions are for the installation of the Polymeric Architectural Grille Accessory for the packaged terminal air conditioner or heat pump. It is designed for use on the polymeric Wall Sleeve. It is installed easily by inserting grille inward through the *inside* of the sleeve, then securing the grille with its built-in supporting hooks.

Stainless steel screws are provided for added stability when secured to sleeve.

### PACKAGE CONTENTS

ITEM	QUANTITY
Polymeric Architectural Grille	1
Stainless Steel Screws	4

### INSTALLATION

#### ▲ WARNING

When installing grille, be sure to hold it securely with 2 hands, to prevent it from falling and causing injury or damage. See Fig. 1.

**Step 1 — Check For Proper Orientation** — Before attempting to install grille, be sure to check it for proper orientation, with top (*long*) support hooks facing **UP**. See Fig. 2.

**Step 2 — Insert Grille** — Remove center support in sleeve. Grasp 2 air baffles securely and insert grille through *inside* of wall sleeve, until *entire* grille is on the outside of sleeve. See Fig. 1 and 2.

**Step 3 — Position Top Hooks** — Slide top hooks upward *all the way* into top flange of wall sleeve. Be sure to push hooks upward as far as possible on wall sleeve flange. While holding top hooks all the way upward, gently pull bottom edge of grille back toward you so that bottom support hook clears bottom flange of wall sleeve, and grille rests flush against outside wall sleeve flanges. See Fig. 3.

**Step 4 — Engage Bottom Hooks** — Slide grille downward so that bottom (short) hooks engage bottom flange of wall sleeve. See Fig. 4. Check to be sure all grille hooks are securely engaged to top and bottom sleeve flanges.

**Step 5 — Secure Grille With Screws** — Line up keyhole slots on back of sleeve with respective screw holes on sides of grille. Use four no. 8-16 x .375 in. stainless steel screws (provided) to secure grille to wall sleeve for additional stability. Install two screws on each side of the sleeve through the keyhole slots into the screw holes of the grille.

NOTE: If a packaged terminal air conditioner chassis is not installed at this time, replace the corrugated center support in the sleeve.



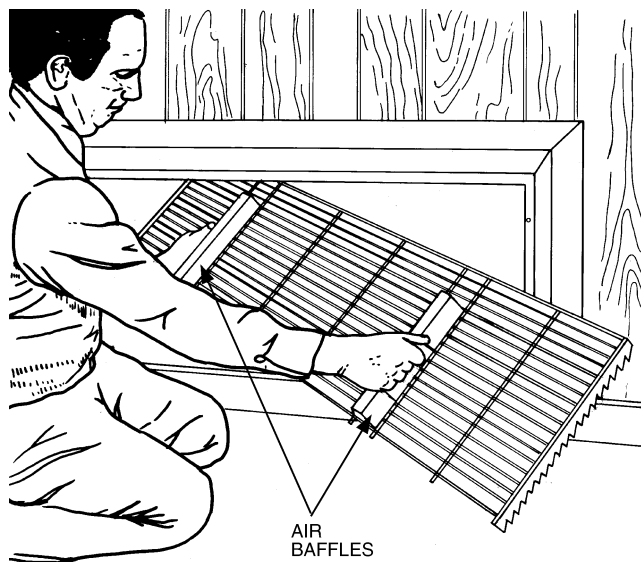



Fig. 1 — Grille Insertion

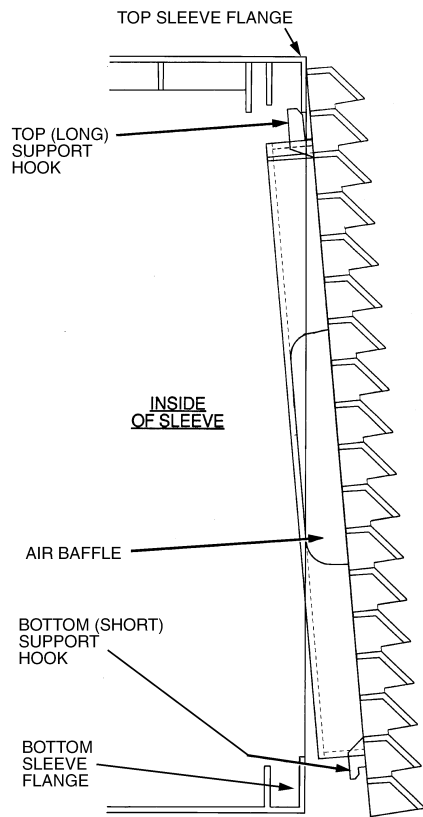

**Fig. 2 — Top (Long) Support Hook Facing Up**

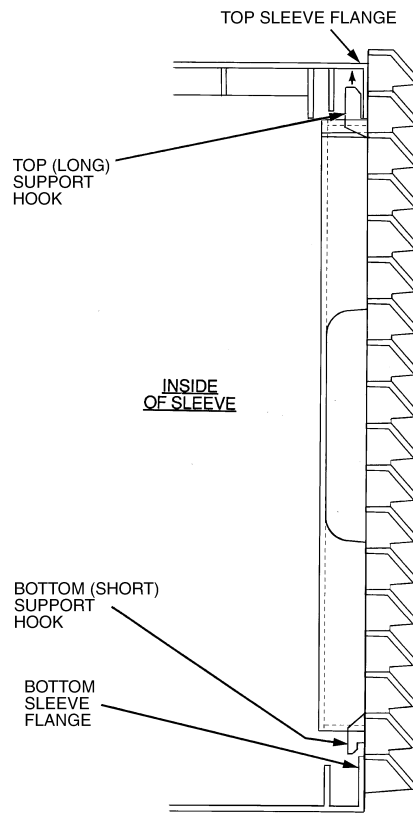

**Fig. 3 — Grille in Position, with Top (Long) Support Hook Pushed Up**

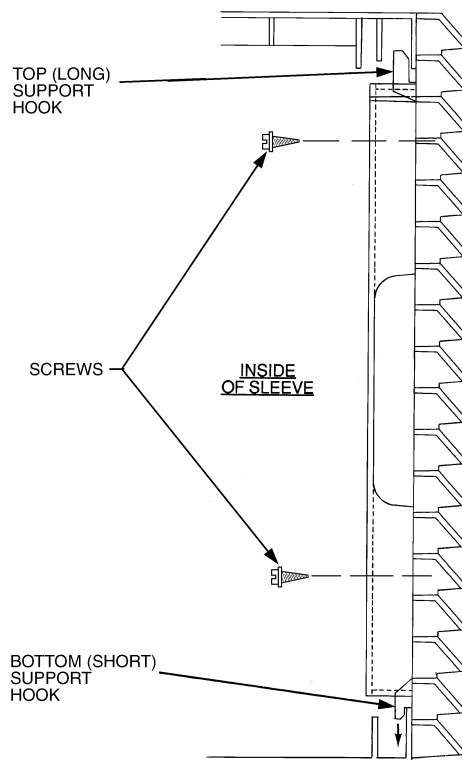

**Fig. 4 — Grille in Position, with Bottom (Short) Support Hook Pushed Down in Bottom Flange of Sleeve**